

HOW TO USE THIS MANUAL

This service manual describes the service procedures for the ARX1200T3, ARX1200T3D and ARX1200N3.

Follow the Maintenance Schedule (Section 4) recommendations to ensure that the personal watercraft is in peak operating condition.

Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period.

Sections 1, 4 and 5 apply to the whole personal watercraft. Section 3 illustrates procedures for removal/installation of components that may be required to perform service described in the following sections.

Section 6 through 19 describe parts of the personal watercraft, grouped according to location.

Find the section you want on this page, then turn to the table of contents on the first page of the section.

Most sections start with an assembly or system illustration, service information and troubleshooting for the section. The subsequent pages give detailed procedures.


If you are not familiar with this personal watercraft, read Technical Features in Section 2.

If you do not know the source of vehicle trouble, go to section 21 Troubleshooting.

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual. Of course, it is not practical or possible to warn you about all the hazards associated with servicing this vehicle.

You must use your own good judgement.

You will find important safety information in a variety of forms including:

- Safety Labels – on the vehicle
- Safety Messages – preceded by a safety alert symbol  and one of three signal words, DANGER, WARNING, or CAUTION. These signal words mean:

DANGER

You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.

WARNING

You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

CAUTION

You CAN be HURT if you don't follow instructions.

- Instructions – how to service this vehicle correctly and safely.

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON Honda MOTORCYCLES, MOTOR SCOOTERS, ATVS OR PERSONAL WATER CRAFT.

Honda Motor Co., Ltd.
SERVICE PUBLICATION OFFICE

CONTENTS

	GENERAL INFORMATION	1
	TECHNICAL FEATURES	2
	HULL/HOOD/BODY PANELS	3
	MAINTENANCE	4
	FLUSHING AND STORAGE	5
ENGINE	LUBRICATION SYSTEM	6
	COOLING SYSTEM	7
	FUEL SYSTEM (Programmed Fuel Injection)	8
	ENGINE REMOVAL/INSTALLATION	9
	CYLINDER HEAD/VALVE	10
	ALTERNATOR/STARTER CLUTCH	11
	CRANKSHAFT/BALANCER (ARX1200T3/T3D)/ PISTON	12
	EXHAUST SYSTEM/ TURBOCHARGER (ARX1200T3/T3D)	13
BODY	PROPULSION SYSTEM	14
	STEERING/REVERSE SYSTEM	15
ELECTRICAL	BATTERY/CHARGING SYSTEM	16
	IGNITION SYSTEM	17
	ELECTRIC STARTER	18
	METER/SWITCHES	19
	WIRING DIAGRAMS	20
	TROUBLESHOOTING	21
	INDEX	22