


CYLINDER HEAD COVER ASSEMBLY/ INSTALLATION


ASSEMBLY

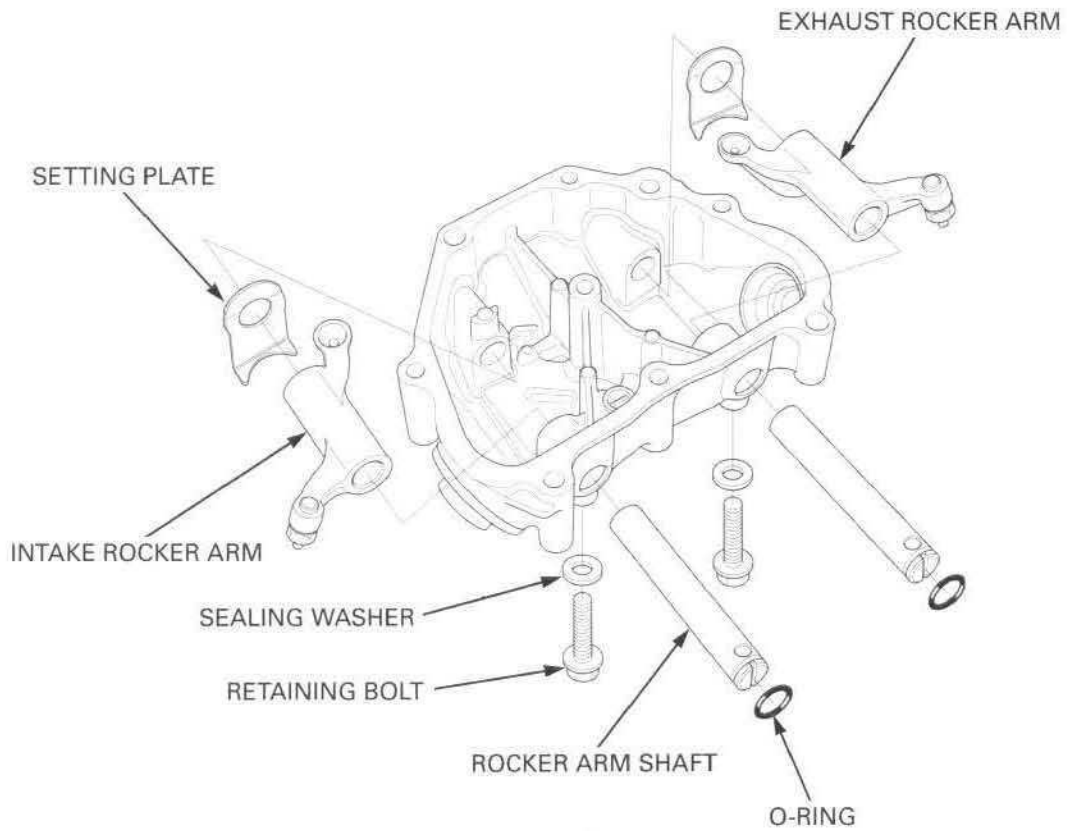

Blow through the oil passages in the cylinder head cover with compressed air.

Coat new O-rings with engine oil and install them into the grooves in the rocker arm shafts.

Apply molybdenum oil solution to the sliding surfaces of the rocker arm shafts.

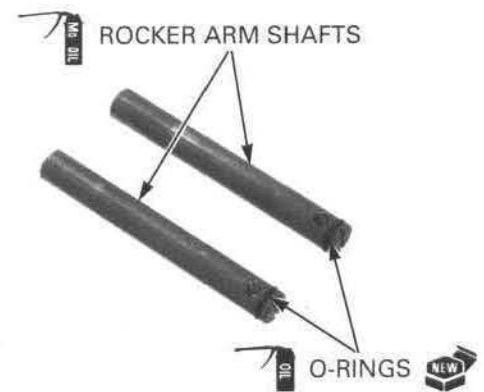

Place the setting plates on the cylinder head cover as shown.

