 
# **GENERAL INFORMATION**

## **MODEL INFORMATION**

#### **Model Number**

The machine model number must be used with any correspondence regarding warranty or service.

 


#### **Engine Designation Numbers**


**EH068OLE** - Twin Cylinder, Liquid Cooled,4 Stroke, Electric Start


**EH076OLE -** Twin Cylinder, Liquid Cooled,4 Stroke, Electric Start

#### VIN Identification



#### **TRANSMISSION I.D. LOCATION**

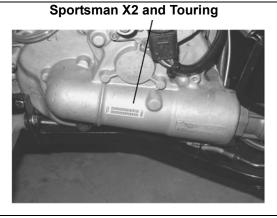

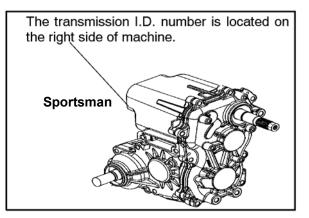


## 1.2

### **Engine and Machine Serial Numbers**

Be sure to refer to the engine model number and serial number whenever corresponding about an engine.

This information can be found on the sticker applied to the top side of the crankcase (A). An additional number is stamped on the side of the crankcase beneath the cylinder coolant elbow.

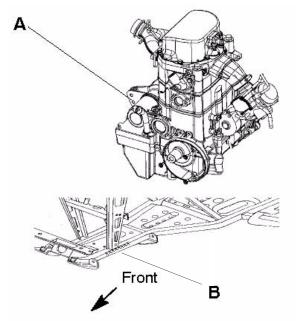

The machine model number and serial number are important for vehicle identification. The machine serial number is stamped on the lower left side of the frame tube (B).