

- Remove the upper wishbone arm and lower wishbone arm.




- Remove the steering knuckle end bolt by holding its end side with a vise.



## INSPECTION AND DISASSEMBLY

### FRONT SHOCK ABSORBER

Inspect the shock absorber for oil leakage or damage. If any defects are found, replace the front shock absorber with a new one.

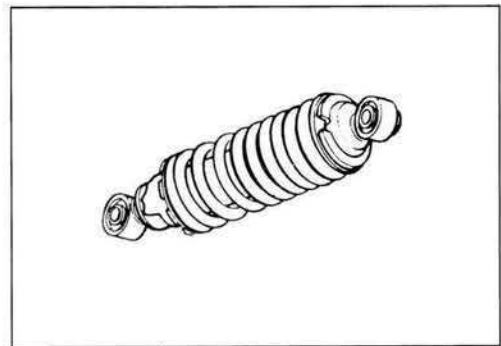

### KNUCKLE END

Inspect the knuckle end boot for wear or damage. If any defects are found, replace the knuckle end with a new one.

