

Fuel Tank


Fuel Tank Removal

- If the level of the fuel is above the filler neck, siphon some fuel out to prevent spilling it.


⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Pull the lanyard key off the stop button. Do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.


- Remove the engine.
- Disconnect the oil level sensor lead connector.
- Remove the oil tank [A] with the oil level sensor [B] (see Oil Tank Removal section in the Engine Lubrication System chapter).

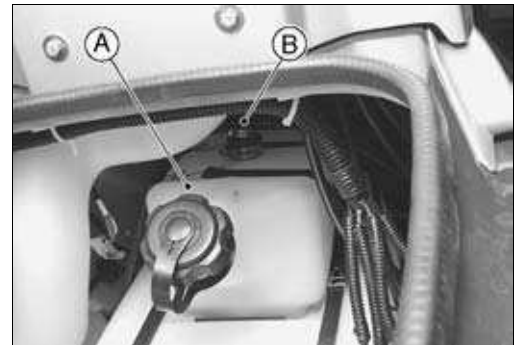

- Remove the bracket [A] holding the EMM, fuel filter and capacitor.

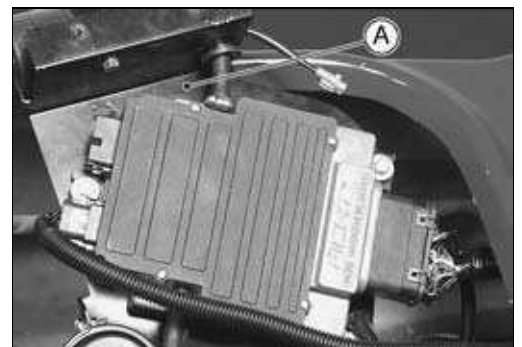

- Remove the fuel pump [A] (see Fuel Pump Removal section in this chapter).

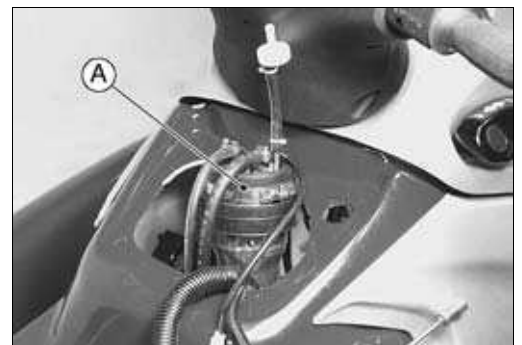

- Disconnect the fuel level sensor lead connector.
- Loosen the lower clamp [A] on the fuel filler tube.
- Unhook the fuel tank strap [B].

