

# Quick Reference Guide

<b>General Information</b>	<b>1</b>	■
<b>Periodic Maintenance</b>	<b>2</b>	■
<b>Fuel System</b>	<b>3</b>	■
<b>Exhaust System</b>	<b>4</b>	■
<b>Engine Top End</b>	<b>5</b>	■
<b>Engine Removal/Installation</b>	<b>6</b>	■
<b>Engine Bottom End</b>	<b>7</b>	■
<b>Cooling and Bilge Systems</b>	<b>8</b>	■
<b>Drive System</b>	<b>9</b>	■
<b>Pump and Impeller</b>	<b>10</b>	■
<b>Handle Pole and Handlebar</b>	<b>11</b>	■
<b>Hull/Engine Hood</b>	<b>12</b>	■
<b>Electrical System</b>	<b>13</b>	■
<b>Storage</b>	<b>14</b>	■
<b>Appendix</b>	<b>15</b>	■

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.