

REMOVAL

1. See Figure 8-24. Insert a small screwdriver into middle hole of license plate light cover. Push forward with screwdriver to release tail lamp housing retaining clip.
2. Lift rear of tail lamp housing up and slide housing assembly away from fender.
3. See Figure 8-25. To replace tail lamp bulb:
 - a. Turn bulb socket assembly (2) clockwise (CW) and pull outward from tail lamp housing.
 - b. Remove bulb by turning counterclockwise (CCW) and pulling from bulb socket assembly.
 - c. Push **new** bulb into bulb socket assembly and turn clockwise.
 - d. Insert bulb socket assembly into tail lamp housing and turn counterclockwise to lock in place.
4. To replace license plate bulbs:
 - a. Remove license plate bulbs (5) by turning housing counterclockwise. Tab on bulb housing must clear tab on license plate light housing.
 - b. Pull bulb from socket and replace with **new** bulb.
 - c. Install housing by aligning tabs and turning clockwise.
5. To replace entire tail lamp assembly:
 - a. Press down on release latch on connector socket (1).
 - b. Detach socket from wiring harness connector.


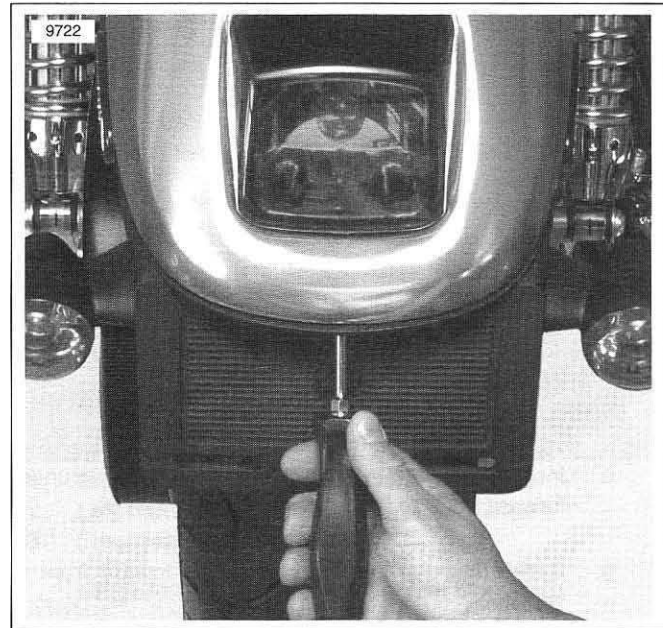


Figure 8-24. Releasing Tail Lamp Retaining Clip

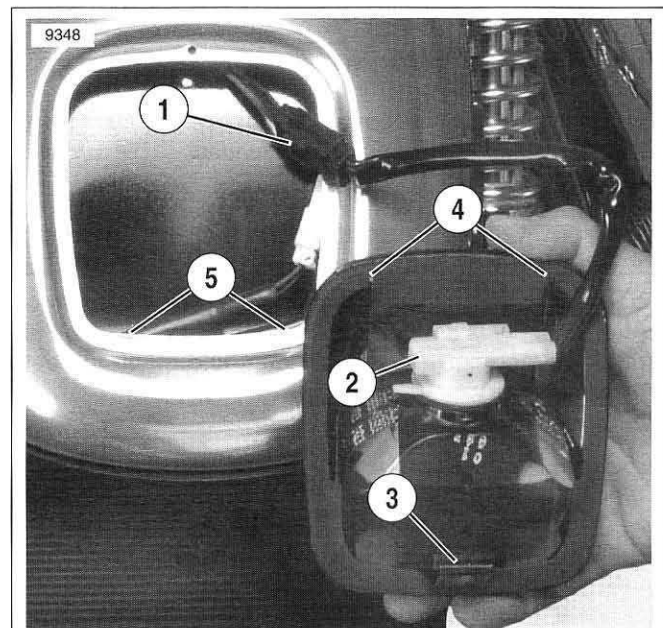

1. Tail lamp connector
2. Tail lamp bulb socket assembly
3. Retaining clip
4. Mounting tabs
5. License plate lamps (2)

Figure 8-25. Tail Lamp Wiring