

## 2. POWER HEAD

1. Remove the fuel pump cover and disconnect the fuel tubes from the pump.

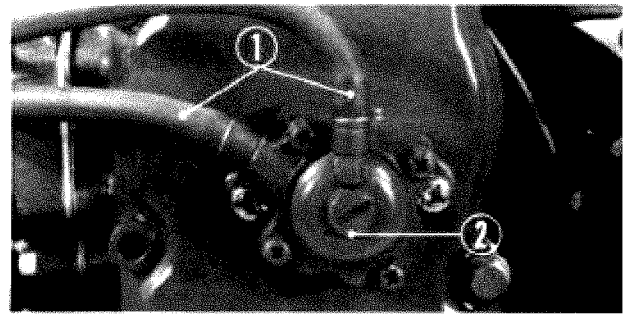


Fig. 2-5 ① Fuel tubes ② Fuel pump

2. Disconnect the choke rod and fuel stop rod.

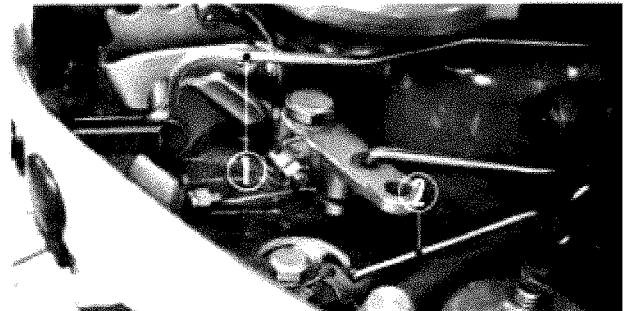


Fig. 2-6 ① Choke rod ② Fuel stop rod

3. Remove the 6 mm bolts and the linkage rods should remain attached to the carburetor.

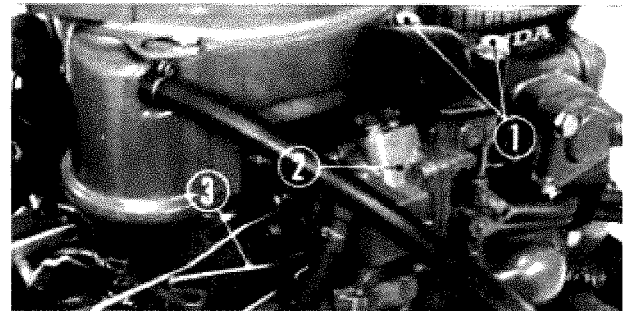


Fig. 2-7 ① 6 mm bolts ③ Throttle rod  
② Carburetor

4. Disconnect the primary wire from the engine switch.

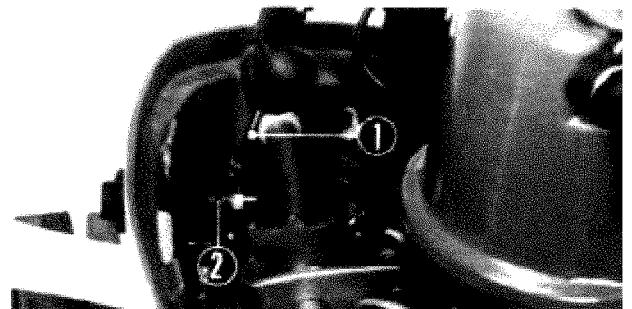


Fig. 2-8 ① Ground cable ② Engine switch

5. Disconnect the breather tube, overflow pipe and cooling water pipe.

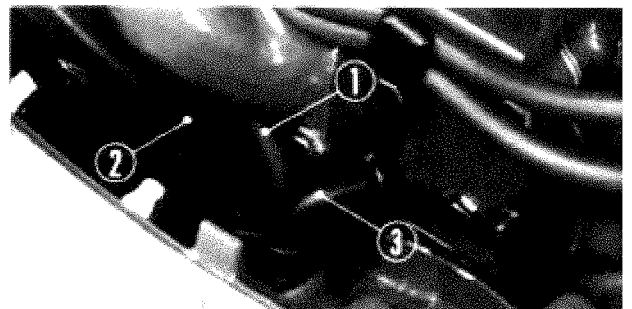


Fig. 2-9 ① Overflow pipe ③ Cooling water pipe  
② Breather tube