

**Test harness**

YW-	90890-	Pin	Usage
06779	06779	8	Charge coil and pickup coil

Checking steps:

- Disconnect the coupler connections.
- Connect the test harness between the couplers.
- Connect the tester terminals to the terminals which are being checked.
- Run the engine and observe the measurement.

NOTE:

- Make sure the output lead (red lead) of the rectifier/regulator is disconnected when measuring the peak voltage of the lighting coil and rectifier/regulator.
- If the charge coil and pickup coil are measured unloaded, disconnect the test harness on the output side coupler.